

Kingtel OWNER'S INSTRUCTION MANUAL

DECT 6.0 Dual Keypad Expandable Cordless System with Speakerphone & Call Waiting Caller ID



MODEL: KT-6111D6

 
PLEASE READ OPERATION MANUAL BEFORE USING YOUR
NEW TELEPHONE AND KEEP IT FOR FURTHER REFERENCE.

PRODUCT FEATURES

1. New DECT6.0 (1.9 GHz) technology
2. GAP compatible
3. Maximum 6 cordless handsets
4. Multiple base up to 2 units
5. Commercial grade high quality speakerphone on base & cordless handset
6. Hands-free speakerphone on handset
7. Handset volume 6 levels adjustable
8. Speaker volume 6 levels adjustable
9. Backlight LCD displays 20 characters, 14 digits and icons
10. 2-way Intercom and call transfer between cordless handsets
11. 3 way conference between 2 handsets and 1 external
12. 2 intercoms at the same time
13. 1 way paging from base unit to cordless handsets
14. 20 polyphonic ring melodies selectable
15. Ringer volume off & 6 levels adjustable
16. 20 dialed number review & redial
17. 100 phonebook entries, 16 characters for each name, 24 digits for each number
18. Call waiting caller ID
19. 100 caller ID memory for received/missed calls
20. Call back from caller ID memories
21. On-hook pre-dial and dialing number editing
22. Flash time 100/300/600 adjustable
23. Automatic call timer
24. Automatic answer
25. Out of range warning tone
26. Battery capacity indication & low battery warning tone
27. Baby call
28. Multiple language support: English, Spanish, French...etc
29. Key in tone music/on/off
30. 2 group alarm
31. Power: 2 "AAA"rechargeable batteries
32. Auto standby up to 120 hrs; talking up to 10 hrs
33. Outdoor range up to 300m
34. Desk/Wall mountable

QUICK OPERATION GUIDE (BASE)

1. MAKE A CALL

Pick up the handset or press  → dial number


2. ANSWER A CALL

Pick up the handset or press 

3. END A CALL

Hang up the handset or press 

4. REDIAL

- On-hook, press **REDIAL/PAUSE** → select number → pick up handset or Press 
- Off-hook, press **REDIAL/PAUSE** for last number redial

5. PRE-DIAL

On-hook: dial number → pick up handset

 
6. VIEW CALLER ID

- On-hook: press ▲ to view missed calls
- On-hook: press ▼ to view received calls

7. DELETE CALLER ID

- Delete Single Caller ID: On-hook press ▲ or ▼ and select a number → press **OK** → select **DELETE RECORD** → press **OK**
- Delete All Caller ID: On-hook press ▲ or ▼ and select a number → press **OK** → select **DELETE ALL** → press **OK** to confirm → press **OK**

8. CALL BACK FROM CALLER ID

On-hook: press ▲ or ▼ and select a number → press 


 
9. STORE NUMBER TO PHONE BOOK

On-hook: press **MENU/OK** to menu mode and select **PHONE BOOK** → press **OK** → select **NEW ENTRY** → press **OK** → enter name press **OK**

10. DELETE NUMBER FROM PHONE BOOK


 

 
On-hook: press **MENU/OK** to menu mode and select **PHONE BOOK** And select a number → press **OK** → select **DELETE RECORD** → press **OK**

11. DIAL FROM PHONE BOOK


 
On-hook: press **MENU/OK** to menu mode and select a number → press  or 

QUICK OPERATION GUIDE (HANDSET)


1. MAKE A CALL

- Remove handset from cradle → press  or  dial number
- Remove handset from cradle → dial number → press  or 



2. ANSWER A CALL

- Auto answer on: remove handset from cradle
- Auto answer off: remove handset from cradle → press  or 

3. END A CALL

- Press 
- Return handset back to cradle

4. REDIAL

- On-hook: press **REDIAL/PAUSE** → select number → press  or 
- Off-hook: press **REDIAL/PAUSE**

5. PRE-DIAL

On-hook: dial number → press  or 

6. VIEW CALLER ID

- On-hook: press ▲ to view missed calls
- On-hook: press ▼ to view received calls

7. DELETE CALLER ID

On-hook: press ▲ or ▼ and select a number → press **OK/MENU** → select **DELETE RECORD** → press **OK/MENU**

8. CALL BACK FROM CALLER ID

On-hook: press ▲ or ▼ and select a number → press  or 


 
9. STORE NUMBER TO PHONE BOOK

On-hook: press **MENU/OK** to menu mode and select **PHONE BOOK** → press **OK** → select **NEW ENTRY** → press **OK** → enter name press **OK**

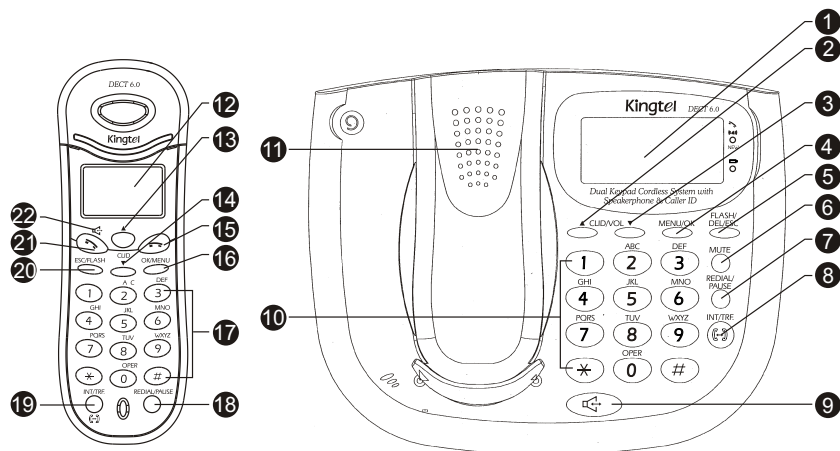 
10. DELETE NUMBER FROM PHONE BOOK

On-hook: press **MENU/OK** to menu mode and select **PHONE BOOK** And select a number → press **OK** → select **DELETE RECORD** → press **OK**

 
11. DIAL FROM PHONE BOOK



 
On-hook: press **MENU/OK** to menu mode and select a number → press  or 

LOCATION AND FUNCTION OF CONTROLS



- ① LCD DISPLAY.....Display phone number, date and time and other information
- ② ▲ CLID / VOL..... a. On-hook: press to show missed calls
b. Off-hook: press to increase volume
c. Speakerphone: press to increase volume
d. Navigation key
CLID:a. Press to review missed CLID
b.Press to review received CLID
VOL: a.Press and hold to adjust ringer volume (On-hook)
b .Press to adjust handset volume (off- hook)
c. Press to adjust speaker volume (speaker)
- ③ ▼ CLID / VOL..... a. On-hook: press to show received calls
b. Off-hook: press to decrease volume
c. Speakerphone: press to decrease volume
d. Navigation key
CLID:a. Press to review missed CLID
b.Press to review received CLID
VOL: a.Press and hold to adjust ringer volume (On-hook)
b .Press to adjust handset volume (off- hook)
c. Press to adjust speaker volume (speaker)

- ④ MENU/OK..... **MENU**:a. Press to access main menu
b. Press to enter sub-menus
OK: a. Press to confirm setting
- ⑤ FLASH/DEL/ESC..... **FLASH**:a. For PBX use
DEL:a. Press to delete digits or letters when editing phone book
b. Press to delete caller ID and telephone number when viewing phone book
ESC: a. Press to return to upper menu
b. Press to delete character or digit when editing number contact Information
- ⑥ MUTE.....Press to activate mute function
- ⑦ REDIAL/PAUSE..... **REDIAL**:a. Press to review the outgoing numbers.(On-hook)
b. Press to dial the last dialed number. (off-hook)
c. Press to dial the last dialed number. (Speaker phone mode)
PAUSE:a. Press for a break off for 1.2/2.4/3.6 seconds.
- ⑧ INT/TRF.....Press to enable intercom, transfer call, conference call
- ⑨  a. Press to activate or deactivate speakerphone (TALK)
b. END:Finish all funtions(return to standby mode)
- ⑩ DIALING KEY (0-9, *, #)
..... a. Dial numbers and extensions
b. (0-9) speed-dial key
- ⑪ SPEAKER..... Ringer sound is spread from here.
- ⑫ LCD DISPLAY..... Display the phone number, date, time and caller ID, and other information
- ⑬ ▲..... a. On-hook: press to show missed calls
b. Off-hook: press to increase volume
c. Speakerphone: press to increase volume
d. Navigation key
- ⑭ ▼ CLID..... a. On-hook: press to show received calls
b. Off-hook: press to decrease volume
c. Speakerphone: press to decrease volume
d. Navigation key
CLID: a. Press to review missed CLID

- b.Press to review received CLID
- 15  a. Press to disconnect
b. Under any sub-menu: press to return to standby mode
- 16 OK/MENU..... **OK**: a. Press to confirm setting
MENU: a. Press to access main menu
b. Press to enter sub-menus
- 17 DIALING KEY (0-9, *, #)
..... a. Dial numbers and extensions
b. (0-9) speed-dial key
- 18 REDIAL/PAUSE..... **REDIAL**: a. On-hook: press to show last dialed number
b. Off-hook: press to dial last dialed number
c. Speakerphone: press to dial last dialed number
PAUSE: a. Press to for a break of 1.2/2.4/3.6 seconds
- 19 INT/TRF..... Press to enable intercom, conference call, transfer call
- 20 ESC/FLASH..... **ESC**: a. Press to return to upper menu
b. Press to delete character or digit when editing number or contact Information
FLASH: a. For PBX
- 21  a. Press once to enable dialing
b. Pre-dial: press to dial out the pre-entered number when on-hook
c. Press to answer a call
- 22  a.Press to activate or deactivate speakerphone(TALK)
b.END:Finish all funtions(return to standby mode)

OPERATION

1. Menu setup

At standby mode, press [MENU/OK] key to enter menu mode

- Press [▲] or [▼] to move page backward or forward
- Press [MENU/OK] key to go to selected page
- Base : Press [↶] key to return to standby mode
Handset : Press [↷] key to return to standby mode

2. Phonebook

To press [MENU/OK] and select phonebook mode, Or, press [MENU/OK] key to enter phonebook.

- Press [▲] or [▼] to browse name list backward or forward
- To search record, press digit key for character entry or press [#] key to change language, press [MENU/OK] key to search
- Press [↶] to dial out
- Press [MENU/OK] to select option, function include new entry, show record, edit record, delete, select ring group, assign speed dial and check memory status
- Base : Press [↶] key to return to standby mode
Handset : Press [↷] key to return to standby mode

3. CLIP Incoming call browse

To enter incoming call browse mode, go to menu mode, select call log menu then select missed call sub-menu for missed call browse or select received call sub-menu for answered call browse. User can press shortcut key at standby mode to enter. Press [▲] key to enter answered call browse or press [▼] key to enter missed call browse.

- Press [▲] or [▼] to browse call list backward or forward
- To edit number, press digit key to add prefix number or press [DEL] key to delete number from left hand side
- Press [MENU/OK] to select option, function include number edit, transfer to phonebook and delete record
- Base : Press [↶] key to return to standby mode
Handset : Press [↷] key to return to standby mode

4. Dialed call browse

To enter outgoing call browse mode, go to menu mode, select call log menu then select dialed call browse. User can press [REDIAL] key at standby mode to enter.

- Press [▲] or [▼] to browse call list backward or forward
- Press [MENU/OK] to select option, function include number edit, transfer to phonebook and delete record
- Base : Press [⏪] key to return to standby mode
Handset : Press [⏩] key to return to standby mode

5. Set music ringer

To select external call music ringer, enter setup mode, go to profile menu, select set handset ringer. Then select music group of default, VIP, family, friend or colleague, browse music melody by pressing [▲] or [▼] key. Press [MENU/OK] to confirm selection and return to music group menu. Total number of song for selection can be define at EEPROM parameter, maximum selectable song is 32. Song number 1~20 are NS's royalty, song 21~30 are classical music for which will have royalty issue that customer should take care.

To select internal call music ringer, enter setup mode, go to profile menu, select set page tone. Then browse music tone (1-4) by pressing [▲] or [▼] key, press [MENU/OK] to confirm selection.

6. Ringer volume, Ringer filter and Ringer off select

1. To set external or internal call ringer volume, enter setup mode, go to profile menu, select set handset ringer, then select volume. User can set ringer volume level from 1 to 6, or set ringer off.
2. To temporary turn off ringer at sleep time, enter setup mode, go to function menu, select set non-disturb. User can set temporary ringer off period from 1 to 16 hours. After this period, ringer will resume to normal. A shortcut key for 8 hours non-disturb is provided by hold [*] key for 2 second at standby mode, or hold [*] key again to release non-disturb function.
3. To active ring filter for external call, user should assign external call number in phonebook music group. Then enter setup mode, go to profile menu, select music group for ringer filter, set ringer off for assigned group.

7. Audio volume control

To change speakerphone volume, press [▲], [▼] key at speakerphone mode.

To change receiver volume, press [▲], [▼] key at earpieces mode.

To change headset volume, press [▲], [▼] key at headset mode.

8. Auto answer function

To answer an external or internal call by lifting from charge cradle, user can

enable auto-answer function. At standby mode, enter menu mode, go to setup menu, select auto answer to function on.

9. Room monitor function

To run room monitor function, two units are used : detector unit (listen) and monitor unit (play).

- To setup a detector, enter menu mode, go to function menu, select room monitor function on. The unit will lock at detector mode and wait for monitor unit to connect. Press [ESC] key to function off menu. Base : Press [⏪] to return to standby mode. (Handset : Press [⏩] to return to standby mode.
- To setup a monitor, press [INT] + detector unit number to connect to detector. Base : Press [⏪] key to quit room monitor function. (Handset : Press [⏩] key to quit room monitor function.
- In case of external ring in during room monitor mode, detector will keep silent and monitor will be ring. To answer call, press [⏪] key at monitor and detector will keep state at detector mode and wait for next connection. After phone call is finished, press [INT] + detector unit number to reconnect detector again.

10. Baby call function

Baby call is a function to provide a quick dial out a predefine number by pressing any key. This is used for child or baby to call their parent just simple press any key on the keypad.

- To turn on the function, enter menu mode, go to function menu, select baby call function on. A telephone number (up to 24 digit) should be input, this is for quick dial access.