

USER'S MANUAL

Caller ID Phone



PRI-750

GCE5928
INSTRUCTION MANUAL

INTRODUCTION

Thank you for your purchasing our newest Caller ID telephone. This manual is designed to familiarize you with this phone. To get the maximum use from your new phone, we suggest that you read this Instruction Manual carefully before operating it.

SAFETY INSTRUCTION



When using your telephone equipment, the following basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons:

1. Read and understand all instructions
2. Follow all warnings and instructions.
3. Unplug the product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use damp cloth for cleaning.
4. Do not place this product on an unstable cart, stand or table. The product may fall, causing damage to the phone.
5. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
6. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
7. Do not use this telephone during an electrical storm, there may be a remote risk of electronic shock from lightning and thunder.
8. [Unauthorized persons cannot open or service even if there is a defect with the unit. This will void the warranty, please call the customer support number 800-988-7728 for help.](#)

FEATURES

- Menu selectable in English / French / Spanish / Italian / German / Danish / Turkish
- Incoming call can be stored in different areas: VIP/NORM/REJ/REV, and can be copied
- Total memory storage of incoming calls is 116
- 25 phone book, each with LCD display of 16 digits and 16 characters maximum
- 16 outgoing calls, each with time and LCD display of 16 digits maximum
- 1 one-touch memory
- 12 two touch memories for the calls you use frequently (Optional)
- 6 digits area code filtering
- 6 digits long distance code available
- 5 levels LCD contrast can be set
- Pre-dialing at the length of 32 digits maximum
- BABY CALL function
- Music-on-Hold
- Alarm clock
- Flash, pause and redial function
- Auto-redial
- Mute and filter function
- New incoming call with ringing LED and IN USE LED indicator
- Hands-free volume selection
- Ringing volume selection
- LCD with blue backlight
- Call waiting function
- AC power supply

LOCATION DESCRIPTION

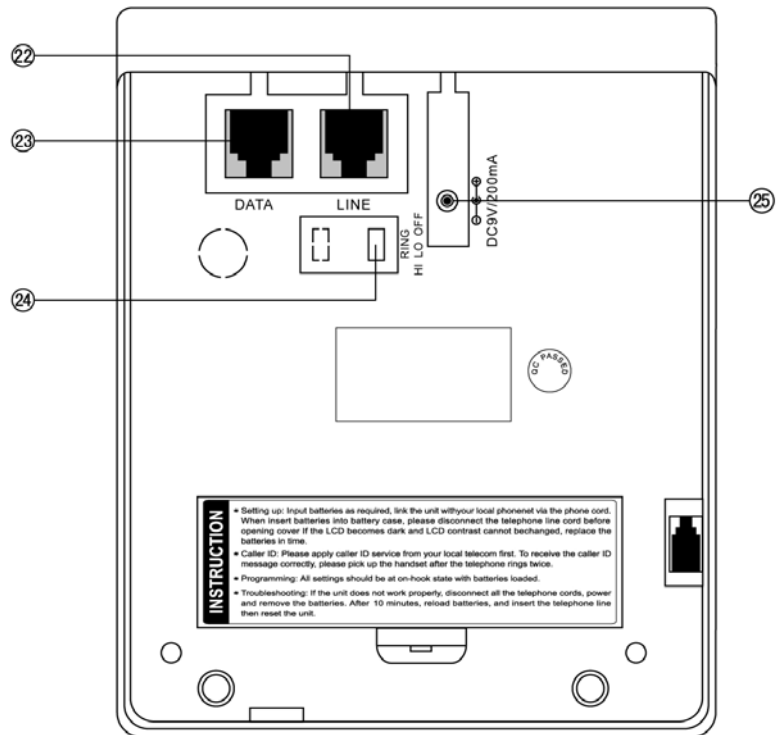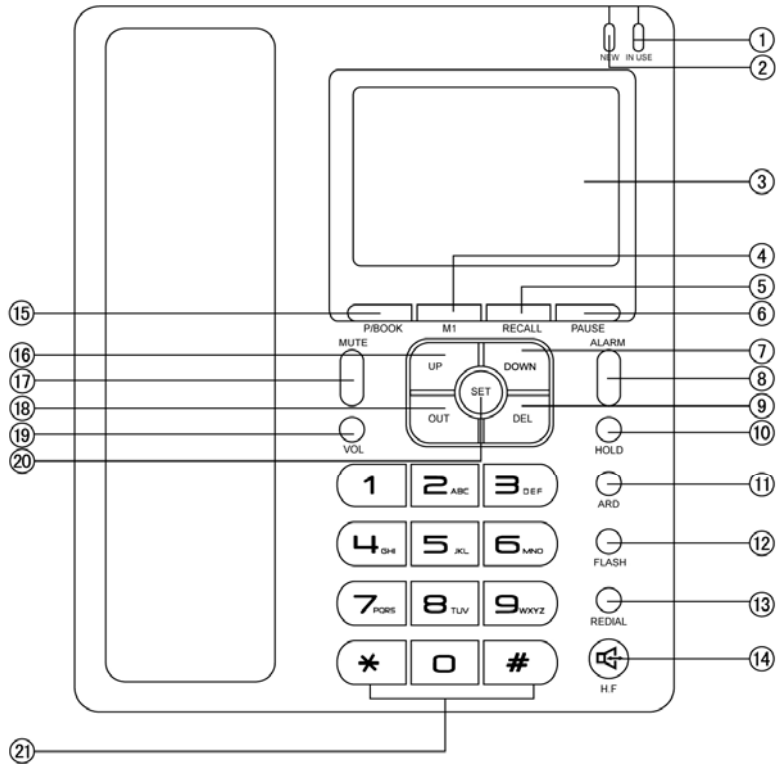

- | | | | |
|----------|---------|----------|-------------------|
| ① IN USE | ⑦ DOWN | ⑬ REDIAL | ⑲ VOL |
| ② NEW | ⑧ ALARM | ⑭ H.F | ⑳ SET |
| ③ LCD | ⑨ DEL | ⑮ P/BOOK | ㉑ NUMERICAL KEY |
| ④ M1 | ⑩ HOLD | ⑯ UP | ㉒ LINE |
| ⑤ RECALL | ⑪ ARD | ⑰ MUTE | ⑲ DATA |
| ⑥ PAUSE | ⑫ FLASH | ⑱ OUT | ㉔ RING(HI-LO-OFF) |
| | | | ㉕ DC9V/200mA |

GETTING STARTED

Caller ID service is available from your local telephone office.

1. Connect the coil cord to handset and the base.
2. Connect the AC power adaptor to your electrical outlet and the base. Or the phone can be operated using 3 AA batteries. Open the battery compartment cover and insert the batteries in the right polarity, then close the cover. There should be time displaying on the LCD after DC adapter is connected or the batteries are inserted.
3. Insert one end of the line cord to the line jack of the base and the other end to the wall phone jack.

NORMAL USAGE

RECEIVING A CALL

From handset

1. Pick up the handset and talk to the other party.
2. To end the call, return the handset to the base.

Switching to speakerphone while on a call

1. When using the handset, press **H.F** key and return the handset to the base.
2. To end the call, press **H.F** key again.

From speakerphone

1. When the telephone rings, press **H.F** key and talk to the caller.
2. To end the call, press **H.F** key again.

NOTE: Caller ID transmits the incoming message between the first ring and the second ring. Answer phone after the second ring if you wish to view before answering the call

MAKING A CALL

From handset

1. Pick up the handset.
2. When you hear the dial tone, dial the desired number.
3. The phone will start to time the conversation after 6 seconds.
4. To exit the call, return the handset to the base.

From Speakerphone

1. Press **H.F** key
2. When you hear the dial tone, dial the desired number.
3. The phone will start to time the conversation after 6 seconds.
4. To exit the call, press **H.F** key again.

Pre-dialing function

1. When the handset is on the base, dial the desired number using numerical key.
2. If there are mistakes, use the **DEL** key to edit.
3. Press **H.F** key or pick up the handset and the number will be dialed automatically.

Redial

1. Pick up the handset or press **H.F** key,
2. Press **REDIAL** key, the last dialed number will be dialed again

FUNCTION AND OPERATION DESCRIPTION

Menu Setting

Press **SET** to enter menu, LCD will display: **VIEW MENU**↓↑. Use **UP** or **DOWN** to select among different items. When you choose one item, press **SET** again to go into its setting. After finishing with one item, press **SET** again to confirm and move to another item. To change items always use **UP** or **DOWN**. If you want to leave the setting at any time, press **DEL**.

The settings of different items are shown in detail as follows:

LAUGUAGE

Press **SET** key then press **UP** key one time, the LCD will display: **SELECT LANGUAGE**, press **SET**, you will see **ENGLISH** displayed on LCD as default menu language setting. Use **UP** or **DOWN** to change the language from English to other languages. Press **SET** to confirm selection.

AREA CODE SETTINGS

Press **SET** key then press **UP** key two times, the LCD will display **SET AREA CODE**, press **SET**, you will see ----- displayed on LCD (or the preset area code) and the first '-' flashing. If you have already set the area code, LCD will display the preset code and the first code will flash. Use **UP** or **DOWN** to edit from 0 to 9, and then press **SET** again to confirm. Advance as above to set the rest. Total 6 digits area code can be set. After setting the area code the phone will auto-filter the area code when receiving an incoming call.

LONG DISTANCE CODE SETTING

Press **SET** key then press **UP** key three times, the LCD will display **LONG DIST ACCESS**, press **SET**, you will see ----- displayed on LCD (or the code you set last time) and the first '-' flashing. If you have already set the long distance code, LCD will display the preset code and the first code will flash. Use **UP** or **DOWN** to edit from 0 to 9, and then press **SET** again to confirm. Advance as above to set the rest. After setting long distance code, press **REDIAL** key twice to dial out the number ahead with the long distance code in dialing back situation.

DATE/TIME SETTING

Press **SET** key then press **UP** key four times, the LCD will display **DATE/TIME**, press **SET** then the year digits will flash. Use **UP** or **DOWN** to change the year (STEP is 1), then press **SET** to confirm and enter the setting of hour. Repeat the operation to set the minute, date and month by turn. LCD will automatically display the corresponding day of the week. The current date and time will usually be updated by the Caller ID signal while the year setting remains unchanged. DTMF call signal have no effect to the setting of date and time.

LCD CONTRAST SETTING

Press **SET** key then press **UP** key five times, the LCD will display **CONTRAST ADJUST**, press **SET** and you will see **CONTRAST 3** on LCD to indicate the default contrast set is at 3 (medium). Use **UP** or **DOWN** to select among the 5 degrees that you prefer. Press **SET** to confirm.

BABY CALL SETTING

Press **SET** key then press **UP** key six times the LCD will display **BABY CALL**. Press **SET** and you will see **BABY CALL OFF** displayed on LCD to indicate the default is BABY CALL OFF. Use **UP** or **DOWN** to turn it ON and press **SET**, then input the BABY CALL number, press **SET** to confirm.

After you set baby call number and set baby call to ON, then the phone will dial out the **BABY CALL** number when you pick up the handset or press any key except that you press **SET** key.

NOTE: If you want to set baby call to OFF state, repeat the above steps to set **BABY CALL OFF** displayed on LCD and press **SET** to confirm.

RING MELODY SETTING

Press **SET** key then press **UP** key seven times, the LCD will display **RING MELODY**, press **SET** key and you will see **RING MELODY 1** displayed on LCD to indicate the default ring melody is the first one. Use **UP** or **DOWN** key to select among the 8 ring melodies that you prefer. Press **SET** to confirm.

ADDING NEW ITEM TO PHONE BOOK

Press **SET** key then press **UP** key eight times, the LCD will display **PHONEBOOK INPUT**, press **SET**, and input the telephone number using numerical key. After your confirmation by pressing **SET**, input the name while using **UP** or **DOWN** to move the cursor and **DEL** to correct. When finished, press **SET** to confirm and come to the next group number input. For example, if you want to input the name "JACK", you should: press 5 key once, 2 key once, 2 key three times, 5 key twice.

The alphabet on the key button arrangement as follow:

1	2 ABC	3 DEF
4 GHI	5 JKL	6 MNO
7 PQRS	8 TUV	9 WXYZ

You can go by above arrangement to input the name to phone recorder by English or another language.

EDITING ITEM IN PHONE BOOK

Press **SET** key then press **UP** key nine times, the LCD will display **PHONEBOOK EDIT**, press **SET** and input the first name character of the item you want to edit. Press **SET** to review the number and the name. The rest of the editing process is the same as adding a new item. You can also press **SET** key and then press **UP** or **DOWN** key to find the item one by one without input the first name character.

ALARM CLOCK SETTING

At on-hook state, press **ALARM** key, LCD will display the current alarm clock state (default is ALARM OFF). Press **UP** or **DOWN** key to set it to ALARM ON or ALARM OFF. When set to ON, press **SET** key, LCD will indicate 00-00 and the first 00 is flashing. Use **UP** or **DOWN** key to edit the alarm hour and minute and press **SET** to confirm.

ALARM CLOCK CONTROL SETTING

If you don't want the alarm clock ring when it is alarm time, press **FLASH** key, the alarm will pause 9 minutes and then alarm again. The maximum alarm time is 1 hour and 57 minutes. When the alarm time reaches 1 hour and 58 minutes, it will terminate the alarm and will alarm again when next alarm time comes.

If you don't need alarm clock, you can press **ALARM** key to terminate it until next alarm time comes. If you don't press any key, it will pause 9 minutes and then alarm again. The maximum alarm time is 1 hour and 57 minutes. When the alarm time reaches 1 hour and 58 minutes, it will terminate the alarm and will alarm again when next alarm time comes.

NOTE: If you don't need alarm clock function, you can set it to "ALARM OFF" state as above setting.

FILTER SETTING (DO NOT DISTURB FUNCTION)

If you don't want to be disturbed by the incoming number at some special time, at on-hook state, you can press **MUTE** key, LCD displays FILTER START to indicate you set the FILTER TIME. Press **UP** or **DOWN** key to set the hour and press **SET** to confirm and go to set the FILTER MINUTE as the same steps. After finish filter hour and minute setting, press **SET** key, LCD displays "FILTER STOP", using the same method to set the filter stop time. LCD will display the FILTER icon. During this filter time, if there is a call comes, it will only display the incoming message but not ring (VIP, NORM message only has "BEEP" tone). At filter time state, you can press **MUTE** key once to switch off the FILTER function and the FILTER icon will disappear.

COPY FUNCTION

At incoming reviewing state, press **UP** or **DOWN** key to review the number you want to copy. Press **RECALL** key once when the number showed on LCD, LCD displays NORM, VIP, REJ and ESC. You can use **UP** or **DOWN** key to move the cursor to select the four copy modes of NORM, VIP, REJ or ESC and press **RECALL** key to confirm. Select ESC means quit the mode and the number will not copy in any mode.

- All the incoming numbers will be stored in REV area automatically. The incoming call in this area has ringing at FILTER OFF state; but no "BEEP" tone or ringing at FILTER ON state. It will delete the number automatically when it is full.
- VIP means very important number. When you copy the number to this area, the number will not be deleted. And at FILTER ON state, the incoming call in this area has four "BEEP" tone.
- NORM means normal number. When you copy the number to this area, the number will not be deleted automatically. And at FILTER ON state, the incoming call in this area has two "BEEP" tone.
- REJ means the number you don't want to answer. The number copied in this area will not ring whether at FILTER ON or FILTER OFF state when the call comes.

MODE FUNCTION SETTING

- At incoming number reviewing state, press **ALARM** key once, LCD displays NORM, VIP, REJ, and REV icon. Press **UP** or **DOWN** to select and press **ALARM** to confirm. The unit will shift to corresponding area.
- Select NORM state, the unit come into NORM area, and you can check all the message and quantity in NORM. Use **UP** or **DOWN** key to check and **DEL** key to delete the incoming message.
- Select VIP state, the unit come into VIP area, and you can check all the message and quantity in VIP. Use **UP** or **DOWN** key to check and **DEL** key to delete the incoming message.
- Select REJ state, the unit come into REJ area, and you can check all the message and quantity in REJ. Use **UP** or **DOWN** key to check and **DEL** key to delete the incoming message.
- Select REV state, the unit come into the default REV area, and you can check all the message and quantity in REV. Use **UP** or **DOWN** key to check and **DEL** key to delete the incoming message.

Operation at on-hook state

- **Receiving incoming calls:** When receiving a FSK or DTMF call, the unit will auto-detect and LCD will display the phone number together with the following information: caller's name, calling date & time, and a serial number. A new number will carry a "**NEW**" icon, and a repeated number will carry a "**REP**" icon. "**PRIVATE CALL**" will be displayed when the caller prefers his or her number to be hidden. "**OUT OF AREA**" indicates the call comes from an area where Caller ID service is not supplied. "**ERROR**" represents an incorrect incoming signal.

The current date and time will be updated by the FSK Caller ID signal while the year setting remains unchanged. DTMF Caller ID signal will not change the date and time setting as it only contains the caller's number.

If there is no caller's name in the Caller ID signal and your phone book contains the name of this number, the name in phone book will be carried on to this call.

- **Checking incoming calls:** Use **UP** or **DOWN** to view the incoming call records, each with caller's name, calling number, calling date and time. To scroll rapidly, press and hold **UP** or **DOWN**.

When redialing an incoming call: press **REDIAL** directly when you find a local call number or press the **REDIAL** key twice for a long distance call number in order to head the number with the long distance code.

- **Checking outgoing calls:** You can use **OUT** to view the outgoing numbers and duration of each call. Press and hold the **OUT** key for 4 seconds to scroll rapidly. Press **REDIAL** or **H.F** key to dial the number you select.
- **Checking phone book:** At the on-hook state, press **P/BOOK** and input the first name character of the item you want to check. After finding the item, press **P/BOOK** again to view the number stored in phone book one by one. You can also find the stored number one by one without inputting the first name character. You can dial this number by pressing **REDIAL** or **H.F**
- **Using the DEL key:**

In the setting mode, use it to correct any input mistakes and quit a setting in other cases.

In the Pre-dialing mode, use it to correct any input mistakes.

When scroll incoming calls, use it to delete an incoming phone number. Pressing and holding it for 4 seconds will delete all the incoming calls and new incoming calls.

When scroll outgoing calls, use it to delete an outgoing phone number.

- **Using the PAUSE key:** It will give a 3.6 seconds pause when work in PABX.
- **Using the FLASH key:** When you dial a number and line is engaged, press **FLASH** key and then press **REDIAL** key to dial it out again.
- **BABY CALL:** Press any key except **SET** key to dial the baby call number once baby call function has been set to ON.
- **Storing incoming calls to phonebook:** on-hook +incoming number +**SET** +**P/BOOK**, you will see end of the number with a flash cursor for you editing, press **SET** key to confirm the number and go to input the name of the number owner and press **SET** to confirm.
- **Dialing the numbers stored in phonebook:** When reviewed the numbers stored in phone book, press **REDIAL** or **H.F** to dial it out.
- **Auto Busy Redialing:** If the line is busy when you dial, hang up the phone and press **ARD**. Your dialed number will be dialed automatically every 10 seconds until the line is connected and you will be noticed by a ringing sound. Then you can pick up the phone to talk. If it rings seven times but nobody answers, the unit will go to on-hook state automatically. Auto busy redial can be aborted by pressing any key before line connected.

NOTE: This function just for your selection.

- **One-touch memory store:** At on-hook state pre-dialing number/incoming number + press **SET + M1**
- **One-touch memory dialing:** pick up the phone/press **H.F** and press **M1**
- **Viewing the one-touch memory content:** at on-hook state +press the **M1**
- **Two touch memory setting:** In on-hook situation when you are pre-dialing or checking incoming calls number, press the SET button then press the address key (number key 0,1,2...9,*,#) of the two-touch memory to store the number what on the LCD.
- **Dialing from two-touch memory:** In the off-hook situation when you press the **RECALL** button then press the number key (0,1,2,..9,*,#), the number, which stored in this memory will be dialed out automatically.
- **Viewing the two-touch memory content:** at on-hook state + press the **RECALL** + address key (number key 0,1,2...9,*,#) of the two-touch memory.
- **Music-on Hold:** At the off-hook state, press the **HOLD** key, and you will enter the hold mode and the hold music will be sent out. In the hold mode, the line will be hold even if you hang up and the receiver can hear nothing but the music. To release the hold mode, you have following ways:

Picking up the phone again if you hang up, the music stops, and you will go back to the conversation again;

Pressing the **HOLD** key again, the music stops, and you will go back to the conversation again;

Pressing the **H.F** key if you hang up, the music stops, and you will go back to the conversation again at the hand-free state.

- **SPEAKER VOLUME CONTROL:** During hands-free conversation, press **VOL** key to adjust the hands-free volume circularly, total 4 levels can be selected. The default is the maximum volume.
- **RINGING VOLUME CONTROL:** At on-hook state, press **VOL** key to adjust the ringing volume circularly, total 4 levels can be selected. The default is the maximum volume.
- **RINGING VOLUME SWITCH CONTROL:** You can slide the **RING** switch to select the ringing volume to HI for high volume, or LO for low volume, or OFF for no ringing.
- **CALL TIMER:** The display shows the duration of the call in progress since a number has been dialed out. Manual control is not available.
- **MUTE FUNCTION:** While on an active call, when you don't want the other party to hear your speaking temporarily, you can press the **MUTE** key to mute. Press it again to un-mute.
- **LCD BACKLIGHT FUNCTION:** The Backlight is turned on when receiving an incoming call, dialing, pressing any key or at the hold state. It is switched off after 10 seconds if no operation.
Note: If batteries are not loaded or DC adapter is not connected, then no LCD back-light function.
- **CALL WAITING:** You can receive the call waiting call at any time on the handset except dialing, music-on hold and auto-redial.

TROUBLE SHOOTING

Not receiving calls: Check if the handset is on the base or line cord line is broken.

Battery rust or leak: Remove the rust using a pencil eraser. If battery is leaking, discard properly and replace with new battery.

Noise: Check if the connector is moist or rust (Change the connector)

Ring once then disconnect when receive a call. Dialing function is available: Check phone line connectors for proper fit into phone jacks.

LCD is dim: Check if LCD contrast is properly set or battery is too low. Adjust LCD contrast. If the LCD is still dim, replace the battery.

Most of the functions failed: Check for low battery. Change the battery if low. If the battery is in normal state, remove the battery, unplug the lines and reinstall after 10 minutes to reset.