

QUICK START GUIDE

CY-936



Handset Installation

1. Push to open the back cover of the handset, and insert the supplied batteries into the compartment according to right polarity marks.

2. Place the handset on the base unit as the photo, and the charge indicator will illuminate.

Note: Charge all batteries for at least 15 hours prior to initial use.

Base Unit Installation

1. Plug one end of the telephone line cord into jack at the bottom of the base unit and the other end of the cord into a modular telephone jack (If your wall jack is not modular, contact your local telephone company for assistance).

2. Plug the supplied DC adapter's barrel plug into the jack at the bottom of the base unit and the other end into a standard 120 AC outlet, the charge indicator will illuminate.

Note: For maximum distance and noise-free operation, place the base unit in a high and central location with no obstructions and away from other electrical appliances.

Power ON the Handset

When the handset is powered OFF, press and hold key for 2 seconds or simply place it on the charging cradle to power it ON. After powering ON, the handset will enter subscription mode and search for a registered base. The screen will show 'SEARCHING'. If the handset is successful in finding a base, the handset will enter the standby mode which shows 'HS (#)' on the screen. If unsuccessful, the screen will show 'OUT OF RANGE'.

Power OFF the Handset

When the handset is powered ON, press and hold key for 2 seconds to power it OFF.

Handset Registration

The handset is pre-registered to the base unit at the factory, and is confirmed on the screen by "HS (#)".

An unregistered handset displays 'UNREGISTERED' on the screen. In this case, please do registration as follows:

1. Press [Page] key on the base unit for more than 3 seconds till the 'In Use' indicator begins to flash quickly.
2. Press [MENU] softkey, select 'REGISTRATION', and then press [OK].
3. Select one of 4 bases available (always recommend "Base 1"), and then the handset begins searching for the base.
4. When the base has been found, input the 4 digits PIN code. The default PIN code is "0000". Then registration is completed.

Paging

To locate misplaced handset(s), press [Page] key on the base unit. Then the handset(s) in range will display 'PAGING FROM BASE' on the screen. No response from the handset(s) if it is battery power failure or turned to Power OFF.

HS Settings

Language setting

1. Press the [MENU] softkey. Select 'HS SETTINGS' and press [OK], select 'LANGUAGE' by using / and then press [OK].
2. Use / to scroll through the 6 available language options. Select the desired language and press [SAVE] to save your setting.

Making a Call

◇ Method 1: Dial a number

Press key, and input the number.

Or input the number, and then press key.

◇ Method 2: Call from Phonebook

Press [DIR.] softkey to review the phonebook, and use / to scroll to the number you need.

Press key to make a call, and press key to terminate the call.

◇ Method 3: Call from Caller ID List

Press / to review the Caller ID list, and press / to scroll to the number you need.

Press key to make a call, and press key to terminate the call.

◇ Method 4: Call from Dialed Numbers List

Press [Redial] key to review the dialed numbers, and use / to scroll to the number you need.

Press key to make a call, and press key to terminate the call.

◇ Method 5: Call the Last Dialed Number

Press key, and press [Redial/Pause] key to dial out the last dialed number.


Press to terminate the call.

Note: Putting the handset on the base unit can also terminate the call.


Receiving a Call

1. Via External line (outside land line)

Caller ID service is not available

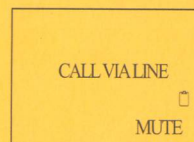

With Caller ID

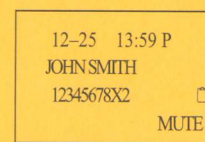

Press key to answer the call, press / to adjust the volume, and press key to end the call.

2. During Intercom

During intercom talk, if an external line call comes, both handset(s) will hear intermittent beeps.

Press key to end the current intercom conversation and answer the incoming call.

3. Switch to a Waiting Call

During an external line call, press [Flash] key to put the current external line call on hold and answer the incoming waiting external line call. Press [Flash] key again to resume the first external line call.

Note: This service may require subscription from your local telephone company.

Troubleshooting

The phone does not ring when a call comes in.	1. The ringer is off.	▪ Turn on the ringer.
Cannot call phone number.	1. The handset has lost link with the base unit.	▪ Page the handset from the base unit to ensure connectivity exists.